RSF1111BK21 4 Post Installation Instruction



Included in this package



(1) Keyboard Drawer



(2) 2" Front Mount Ear Bracket



(2) 17" Rear Mount Bracket



(2) Cable strap anchor bracket



(1) Cable Strap

Included Mounting Hardware



(10) M4 x 8 Screws



(8) #10-32 x 5/8 Rack Screws



(8) #12-24 x 5/8 Rack Screws



(6) M4 K-Lock Nuts



(4) M4 x 5 flat head screw

Optional Accessories: (Not included)



(2) 5" Center / Rear Mount Bracket (for 16" to 19".Cabinet

Tools Required for installation (Not included)



Adjustable wrench or plier.




Phillips head screwdriver size #2

RSF1111BK21F4K3 4 Post Installation Instruction




Parts required for this installation.

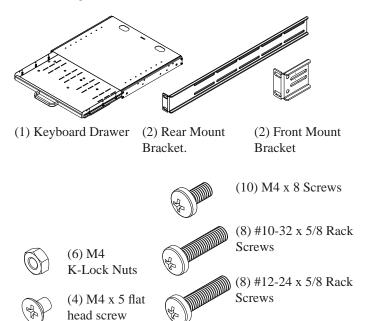


Installation Steps


Step 1 Installing Front Ear Brackets

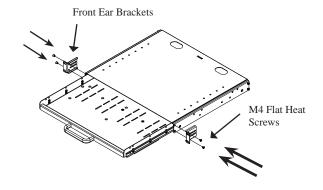


Step 2 Installing Right Rear Bracket.

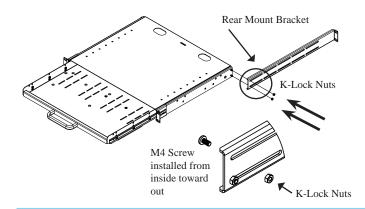


Step 3 Installing RSF1111 Drawer into 4 post rack

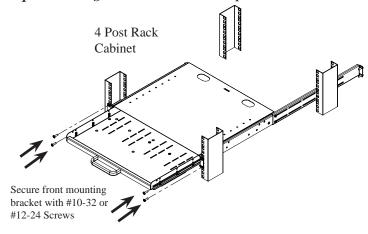

Step 4 Installing Left side rear-mount bracket

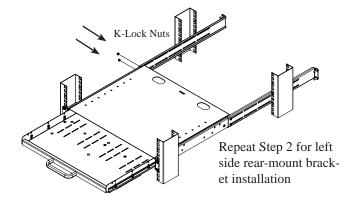


Step 5 Secure both rear mount brackets

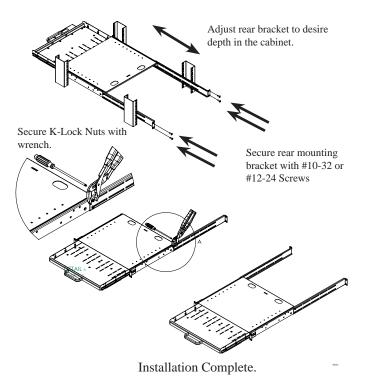

Keyboard Tray Positions




Rail Position #1

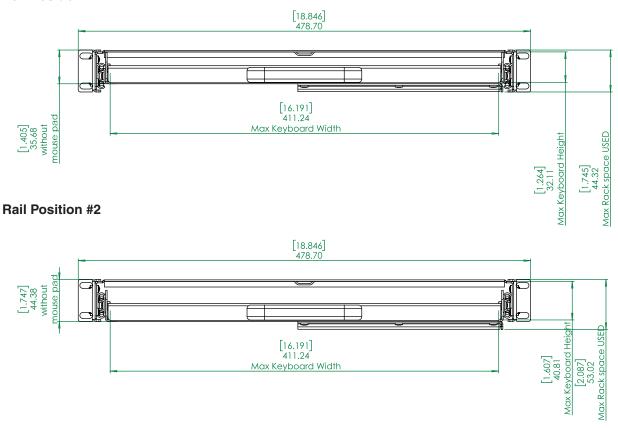

Max Keyboard Width

Rail Position #3

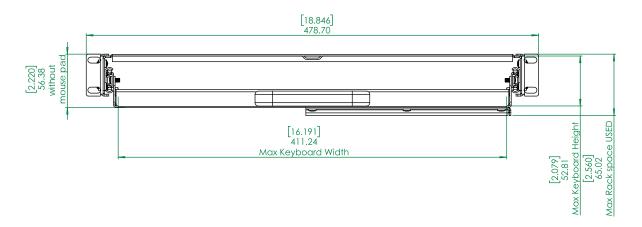


Keyboard Tray height adjustment instruction




If your keyboard height is higher than default keyboard tray height, this instruction shows you how to do height adjustment.


Step 1 Sliding keyboard tray out then removing (6) M4 Screws on rail.

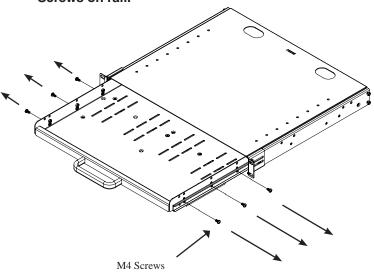


Step 2 Lifting Rails and shelf up.

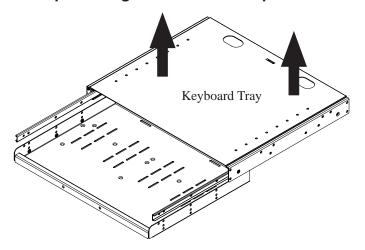

Step 4 Attach sliding rail to keyboard tray with M4 screws and K-Lock Hex nuts

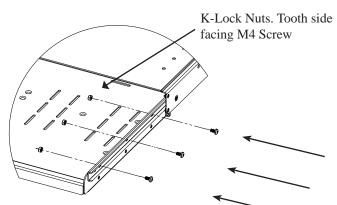

Align mounting screw holes on rail with screw holes on the keyboard tray.

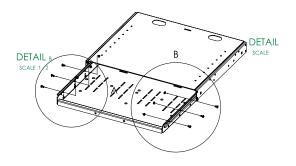


Adjustment complete.

Rail mounting position 3

Rail mounting position #2

Rail mounting position #1 (Default Mounting)

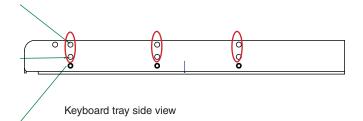

Lifting sliding rail to Rail mounting position #2 or Rail mounting position 3 on the keyboard tray depends on keyboard height

Mouse Pad mounting positions



(6) M4 Flat head screws


Retractable Mouse Pad

Mouse Pad Housing


Default Right hand side mouse pad installation

Note: mouse pad housing is secured by (6) M4 Flat head screws into holes on the keyboard tray


Right side mouse pad mounting holes position. (6) mounting holes marked by red circle.

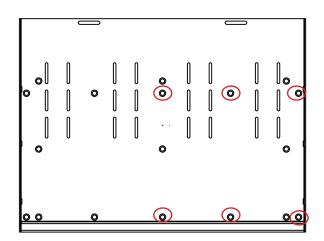

Left side mouse pad mounting holes position. (6) mounting holes marked by red circle.

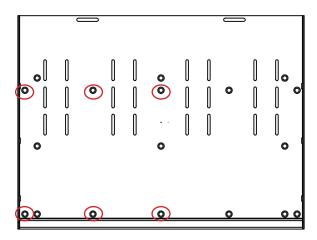

Left front mouse pad mounting holes position. (6) mounting holes marked by red circle.

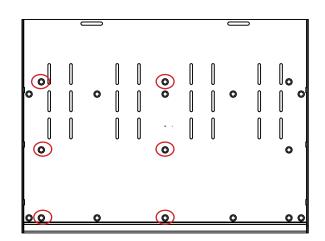

Right front mouse pad mounting holes position. (6) mounting holes marked by red circle.

